

# AC003 Foot Switch

## Installation

The foot switch is a simple momentary type switch. While pressed, the two wires coming from the switch are connected together. It should be fitted as described in the operating manual supplied with your Monit Rally Computer (see Installation and Auxiliary Input sections).

One wire of the foot switch should be connected to a Monit Auxiliary Input (either Aux A (White wire) or Aux B (Brown wire)) and the other wire of the switch should be connected back to the Monit Ground (0v-, Black wire).

During installation, note that:

- The polarity of the two switch wires does not matter.
- The foot switch will not work until it has been configured in software. See Monit Operation and Installation manual - Auxiliary Inputs

monit | rally

© Monit Limited  
2006-2016



AC003-EN  
Foot Switch

Robust metal foot switch for  
use as an remote reset.

